
Recovery Guide for Primary Server Failure

Many-to-One configuration

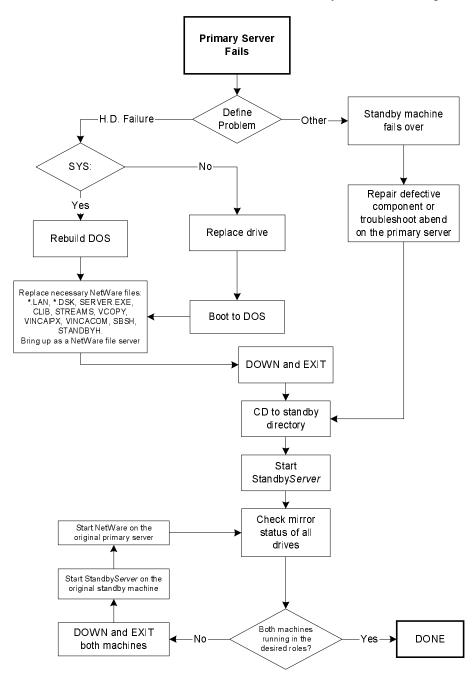

Novell.

Recovery Guide for Standby Machine Failure Many-to-One configuration Standby Machine Fails Repair defective H.D. Failure-Define Problem Othercomponent or troubleshoot abend Does H.D. have No-DOS partition? Yes Replace or repair drive Replace or repair drive Rebuild DOS Boot to DOS Replace necessary NetWare files: *LAN, *.DSK, SERVER.EXE, CLIB, STREAMS, VCOPY, VINCAIPX, VINCACOM, STANDBYH. Use VCopy to copy all the server and standby directory contents from the other machine. Remove NetWare partition from the CD to standby standby machine disk devices directory DOWN and Yes Start EXIT Standby Server Are all .NCF Re-establish files correct? mirrors for all drives Nο

DONE



Edit NCF

files

Recovery Guide for Standby Machine When Used As a Utility Server Many-to-One configuration **Utility Server** Machine Fails Repair defective H.D. Failure Define Problem Oth ercomponent or troubleshoot abend Wasit Local or mirrored Localthe SYS: Novolume? volume? Mirrored Replace drive Replace or Replace or repair drive repair drive Rebuild DOS Reinstall NetWare Reinstall Standby Server CD to standby directory Start Standby Server Create Does a NetWare NetWare partition exist? partition Yes Start NetWare on the Check mirror original primary server status (remirror if needed) Start StandbyServer on the original standby machine DONE Yes Recover the system Both machines using the VOLSWAP **←** Norunning in the

desired roles?



program